

JEFF NEWNHAM FARRIERY SERVICES


SIMPLE Hoof Boot by Cavallo . . . the Multi-Purpose Hoof Boot. Easy to Measure.

Measure the hoof length carefully just AFTER A FRESH TRIM. Do NOT include heel bulbs. We have allowed for growth between regular trims.

SIMPLE to Measure

Simply measure each hoof length from buttress to toe just after a fresh trim, as shown in the diagram.

Length INCHES	SIMPLE SIZE	Length MILLIMETERS
4" - 4 1/4"	0	102 - 109
4 5/16" - 4 9/16"	1	110 - 117
4 5/8" - 4 7/8"	2	118 - 125
4 15/16" - 5 3/16"	3	126 - 133
5 1/4" - 5 1/2"	4	134 - 141
5 9/16" - 5 13/16"	5	142 - 149
5 7/8" - 6 1/8"	6	150 - 157

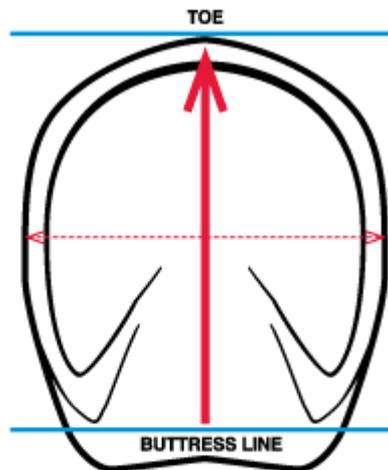

SIMPLE Boot allows for growth between regular trims. If your horse's hoof width exceeds the length by more than one size, then SIMPLE Boot may not be suitable for your horse.

Measuring Tips:

1. The weight-bearing LENGTH indicates the SIMPLE size necessary. However, it is a good idea to take width measurements as well since that helps to confirm you have chosen the correct size
2. You may wish to measure each hoof as they may differ in size requiring two different pairs.
3. Only new UNUSED boots can be exchanged. To keep the boot clean, we suggest covering the hoof with thin plastic and checking fit on a non-scuff (not gravel), clean, dry surface.

The SIMPLE Boot is SIMPLE to FIT!

Simply insert hoof into boot. Secure Velcro® closures and adjust sliding keepers.

Here you can see how the sole fits into the length of the boot and the heel bulbs fit into the padded heel area at the back of the boot.



Before Your First Ride

Only new UNUSED boots can be exchanged. To keep the boot clean, we suggest covering the hoof with thin plastic and checking fit on a non-scuff (not gravel), clean, dry surface.

Like your own riding boots, it is recommended that time is taken to gradually break in your SIMPLE Boots. If your horse has sensitive skin, or if you are going on a long ride and are concerned about potential rubbing, Cavallo Pastern Wraps are available. If your horse is fine boned and there is excess space between the pastern and the boot collar, wraps can also prevent major debris from entering the boot.

Simple Fitting Tips:

- **SOLE:** The sole of the hoof should fit securely inside the boot sole. Ensure that the entire weight-bearing wall from front of toe to heel buttress sits within the Simple Boot outsole. It may be helpful to compare the outside raised tread area at the bottom of the boot to the weight-bearing length of the hoof sole (toe to buttress as per diagram above).
- **OUTER COVER:** Ensure that the boot tongue is pushed firmly against the hoof. Draw the outer flaps firmly around the hoof, pressing the Velcro on the flaps against the Velcro on the tongue; keep taut and level.
- **TWISTING:** If the boot twists or moves excessively, it may be too big or the outer cover may be loosely fastened.
- **TOO SMALL:** If you have difficulty putting the boot on, it may be too small. Ideally the boot "snaps" nicely onto the hoof for a good fit. Please check your measurements against the chart above.
- **PASTERN WRAPS** may be used to assist in the breaking-in process to prevent chafing.



ONCE THE BOOT IS FITTED, if the strap extends beyond the nylon keeper, then you can cut the strap to the preferred length, leaving a line of stitching to prevent unraveling.

PLEASE NOTE: Boots cannot be exchanged if straps have been cut. Be sure boots are correct size BEFORE cutting.